

PROGRAMMES

Observe the recommendations on the care labels of your laundry.

ECO COTTON

Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. The values on the Energy label are based on this programme



COTTON

Normally to heavily soiled and robust cotton and linen laundry, such as towels, underwear, table linen etc.



MIXED

Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. 1-hour programme.



SYNTHETICS

Normally soiled laundry made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.



DELICATES

Fine laundry made of delicate fabrics, which needs gentle treatment.



WOOL

Woolens, labeled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable.



RAPID 30'

Lightly soiled laundry made of cotton, synthetics and their blends. Refresh programme for laundry without stains.



COLOURS

Lightly to normally soiled laundry made of cotton, synthetics or their blends; also delicates. Helps preserving colours.



RINSE AND SPIN

Separate rinse and intensive spin programme. For robust laundry.



SPIN

Separate intensive spin programme. For robust laundry.



DRAIN

Separate programme to drain the water, without spinning.



SPECIAL PROGRAMMES

To set one of the following programmes, select the special programmes position. Press the DOWN and UP keys to select one of the programmes mentioned below. The selected programme is marked with ">". Press the OK key to confirm the selected programme.



SHIRTS

Shirts, blouses and fine business clothes made of cotton, synthetics or their blends.

DUVET

Big items such as sleeping bags, washable blankets, bathmats, pillows and duvets filled with feathers or synthetic material.

BED LINEN

White or coloured bed linen made of cotton and synthetic fibers, or blends of both.

CASHMERE

High-quality cashmere garments identified as machine washable or hand washable.

SPORT

Normally soiled and sweaty sportswear made of cotton jersey or microfibers.

Includes a prewash cycle – you can add detergent also to the prewash chamber. Do not use softener.

JEANS

Normally soiled cotton jeans-wear and garments made of robust jeans-like material, such as trousers and jackets.

BABY ITEMS




Normally soiled baby clothes made of cotton and/or linen. The suds are rinsed out even more thoroughly, which helps to protect sensitive baby skin.

MINI LOAD

Cotton and/or synthetic laundry made of stable fabric types. Ideal programme for washing a small laundry load in an economic way.

CONSUMPTION DATA

This data may differ in your home due to changing conditions in inlet water temperature, water pressure etc.

PROGRAMME	TEMPERATURE (°C)	LOAD (KG)	WATER (L)	ENERGY (KWH)	APPROXIMATE PROGRAMME DURATION (H:MIN)		APPROXIMATE REMAINING MOISTURE CONTENT (%)
					WITHOUT RAPID	WITH RAPID	
Mixed	40	7.0	67	0.50	01:00	00:55	55
Cotton	95	12.0 (max)	126	3.50	03:15	--	55
Cotton	60	12.0 (max)	120	2.00	02:35	01:55	55
Cotton	40	12.0 (max)	94	1.70	03:30	02:10	55
Synthetics	60	4.0	58	1.20	02:20	01:20	35
Synthetics	40	4.0	55	0.80	02:20	01:20	35
ECO COTTON 	60	12.0 (max)	63	0.51	06:00	04:00	53
ECO COTTON 	60	6.0	43	0.46	04:00	*	53
ECO COTTON 	40	6.0	43	0.43	04:00	*	53

Values measured in normal conditions in accordance with IEC/EN 60456. Water, energy and remaining moisture content values refer to the default setting of the programmes, without options.

max = maximum load capacity of the washing machine

Acoustic values on declaration label refer to appliance after complete installation, with adhesive pads fixed on bottom of washing machine according to separate instructions.

* Duration indicated after load sensing

Eco Cotton is the standard programme for washing normally soiled cottons, and it is the most efficient programme in terms of combined water and energy consumption. For reasons of energy saving, the real water temperature may deviate from the specified cycle temperature.

Power consumption in off-mode is 0.25 W/in left-on mode 0.25 W.

OPTIONS, FUNCTIONS AND INDICATORS

Refer to the Programme Chart to check if options are available for the selected programme

OPTIONS which are selectable by pressing the Options button

Prewash

Helps to clean heavily soiled laundry by adding a prewash phase to the wash programme selected.

Extends the programme by about 20 minutes.

For adding detergent to the prewash phase

- **automatically:** make sure that the auto dosing system is activated (see FUNCTIONS / Auto Dosing)
- **manually:** add the detergent portion for the prewash phase directly to the drum in a detergent ball, before starting the programme.



Hot Finish

The programme ends with a warm rinse phase. This relaxes the fibres of your laundry, and the laundry feels comfortably warm when taking it out a short time after programme end.



Bio Stains 15°

Helps to remove all kinds of stains, except grease/oil.

The programme begins with a cold water wash phase.

Extends the programme by about 10 minutes.

Pre-treatment recommended for stubborn stains.

Not selectable for Cotton 95°C.



Colours 15°

Helps to preserve the colours of your laundry by washing it with cold water (15°C). Saves energy for water heating, while keeping a good wash result. Suitable for lightly soiled coloured laundry without stains.

- Make sure that your detergent is suitable for cold wash temperatures (15 or 20 °C).
- Not selectable for Cotton 95 °.



Fresh Care

Helps to keep your laundry fresh if you cannot unload it soon after programme end.

The washing machine will start to tumble the laundry periodically a short time after programme end. This tumbling will last up to approximately 6 hours after end of your wash programme. You can stop it at any time by pressing any button; the door unlocks and you can take out your laundry.



Heavy Soil

Helps to clean heavily soiled, stained laundry by optimising the efficiency of additives for stain removal.

Add an appropriate amount of in-wash additive for stain removal (powder) to the manual detergent dosing compartment, together with your detergent (powder only). May extend the programme by up to 15 minutes.

Appropriate for use with oxygen-based stain removers and bleaching agents.



Chlorine or perborate bleaches must not be used!

Intensive Rinse

Helps to avoid detergent residues in the laundry by extending the rinse phase.

Particularly suitable for washing baby laundry, for people suffering from allergies and for areas with soft water.



Rapid

Enables quicker washing.

Recommendable for only lightly soiled laundry.

Not selectable for Cotton 95 °C.

FUNCTIONS

Auto Dosing

Automatically dispenses **liquid detergents** and **fabric softener** (if needed) from the tanks of the detergent dispenser. To enable a correct dosage, this function needs to be set up as mentioned in section FIRST TIME USE/Auto Dosing, and as described in detail in the USE AND CARE GUIDE/AUTO DOSING – FIRST USE.

Once you have completed the set-up, make sure that the tanks are filled with detergent/fabric softener according to the selected configuration:

- If you **use** fabric softener:
 - » Tank 1: detergent
 - » Tank 2: fabric softener

In this configuration, when setting up a programme, Tank 1 and Tank 2 buttons light up to indicate that the right amount of detergent and softener will be dispensed, once the programme is started. If in certain cases you do not want to dispense softener, simply disable Tank 2 by pressing the corresponding button.

- If you **do not use** fabric softener:
 - » Tank 1: main detergent
 - » Tank 2: secondary detergent

In this configuration, when setting up a programme, you can only select one tank. Make sure that the correct tank is selected, according to the detergent you want to use for the selected programme. The detergent will be dispensed only from the tank for which the related button lights up.

If occasionally you prefer to dose the detergent manually (for instance because you want to use another detergent), simply deactivate the tanks by pressing the buttons, and add the detergent in the compartment for manual dosing. The deactivation of the tanks will be valid only for one programme. The Auto Dosing function will automatically be active again for the next programme which you set up.

When the supply of detergent/fabric softener in one of the tanks runs low, the display shows a low level warning when the washing machine is switched on, and also at the end of the programme. In addition, the corresponding tank button light blinks a few times. When this message appears for the first time, the supply in the indicated tank is usually sufficient for about two or three more programmes.

When the supply of detergent/fabric softener in one of the tanks has run out completely, the display shows an empty tank warning and informs that only manual dosing is possible. The button light of the empty tank blinks a few times. You have to either refill the empty tank(s), or dose the detergent manually.

In case you want to permanently deactivate the Auto Dosing function (because you always prefer to dose manually), press the Settings button, select Auto Dosing and set the function to Off. To be able to use the function again later, it must be set to On.

IMPORTANT:

- Never fill the tanks with powder detergents; powder can only be used for manual dosing
- Softener cannot be dosed manually; it can only be used in Tank 2 of the auto dosing system.



6th Sense Live Remote Control

The 6th Sense Live feature allows to remotely monitor and control your washing machine using a smartphone or a tablet. To use this feature you have to successfully connect the machine to your home wireless network and to the Internet by following the set-up procedure described in the Use and Care Guide (6th Sense Live Feature / Setup Procedure section).

You can monitor the status of your washing machine at any time using the 6th Sense Live app. If you want to control the appliance remotely (for example: to set and start a programme), the Remote Control has to be enabled.

To enable Remote Control:

- Make sure the router is on and connected to the Internet.
- Switch on the washing machine.
- Load your laundry, close the door, add the detergent and make sure the water tap is open.
- Make sure the Connection Status indicator is solidly lit.
- Press the Remote Control button, the door locks and the buttons and keys on the control panel are disabled. The only controls still active are "Remote Control", "ON/OFF" and "Key Lock".
- The washing machine is now in Remote Control mode and is ready to be controlled via 6th Sense Live app.
- If you start a programme remotely, at the end of the programme the washing machine will automatically exit the Remote Control mode and will switch off.

To manually exit Remote Control:

- With the machine in Remote Control, press again the Remote Control button. You will regain local control over the control panel of the washing machine.

Rinse hold (selectable with Spin button)

Avoids automatic spinning of the laundry at the end of the programme. The laundry remains in the last rinse water, the display indicates the rinse hold and the programme does not continue.

Suitable for delicate laundry which is not appropriate for spinning, or which should be spun with a low spin speed. Not suitable for silk.

To select "Rinse hold":

- Press the spin button; select Rinse hold. The Rinse hold symbol on the display lights up.

The display indicates when the programme has reached the Rinse hold. Choose to:

- **drain the water, no spin:** press the Spin button, or the UP or DOWN key, to select spin speed "0". Or select programme Drain. Afterwards press Start/Pause: the water will be drained and the programme ended.
- **spin the laundry:** the default spin speed blinks - start the spin cycle by pressing Start/Pause. Or select a different spin speed by pressing the Spin button and the UP or DOWN key, and press Start/Pause.

Finish in

Enables to have the laundry ready at a particular time by setting a delay until end of the programme.

Choose a delay up to 23:30 hours. Only if you add detergent manually: use powder - and not liquid - detergent with this function to fill the detergent compartment for manual dosing.

Select programme, temperature and options.

- Press the "Finish in" button - the button lights up.
- Press UP or DOWN key to select a delay up to 23:30 hours.
- Press "Start / Pause" - the countdown of the delay starts. The display indicates the Finish in period (= time until end of programme), as well as the default programme duration.
- The programme starts automatically, in time to be finished at the end of the delay period. On programme start, the delay on the display is replaced by the current programme status.



To cancel the delay

- either press Start/Pause to cancel the delay; to start the selected programme immediately, press Start/Pause again
- or press and hold On/Off to cancel the complete programme setting.

Key lock

To lock the buttons and keys of the control panel against unwanted operation.

To lock:

- The washing machine must be switched on.
- Press and hold the option button until the display indicates that the keys are locked. The buttons and keys are locked now; only On/Off works.

If you switch the washing machine off and on again, the key lock remains active until you unlock it.

To unlock: press and hold the option button again for at least 3 seconds, until the display indicates that the keys are unlocked.



INDICATORS


Door can be opened



Energy / Water monitor

Gives feedback about the energy and water consumption of your programme setting.

The less indicators light up, the more economic is your programme setting. Can still adapt after sensing phase of laundry load.

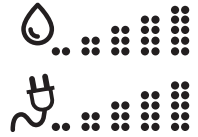

Failure: Observe the display message.

For any failures, refer to section Troubleshooting in the "Use and Care Guide".



Descaling

A display message will remind you regularly to descale the washing machine. Find descaler appropriate for the washing machine on www.whirlpool.eu.

To cancel the display reminder, press the OK key.

Connection status

If your washing machine has been already connected to the Internet (see 6th Sense Live Remote Control / Setup Procedure section in the Use and Care Guide) this indicator provides a feedback about the status of the Internet connection through your WiFi router.

When you switch on the washing machine, the connection status indicator blinks: the washing machine is looking for a connection. When it becomes solidly lit, it means that the appliance is properly connected to the Internet.

The strength of the wireless signal is shown by the indicator (when all the elements of the indicator are lit, the signal strength is strong).



MAINTENANCE AND CLEANING AND TROUBLESHOOTING

For maintenance and cleaning, and for troubleshooting, see the **Use and Care Guide**.

The **Use and Care Guide** can be obtained as follows:

- After-Sales Service; using the phone number in the warranty booklet
- Download from the Whirlpool website <http://docs.whirlpool.eu/?brand=WH>



CONTACTING AFTER-SALES SERVICE

Provide both numbers shown on the service sticker inside the door when contacting the After-Sales Service team.

<http://www.whirlpool.eu>

The phone number can be found in the warranty booklet.



400010848662

Whirlpool® is a registered trademark of Whirlpool, USA



